

AIR RECYCLING ARA

USER MANUAL



INNOVATION
MORE THAN
JUST A WORD



www.alapros.com

 **Alapros**[®]

1.9 CAPACITY AND DIMENSIONS

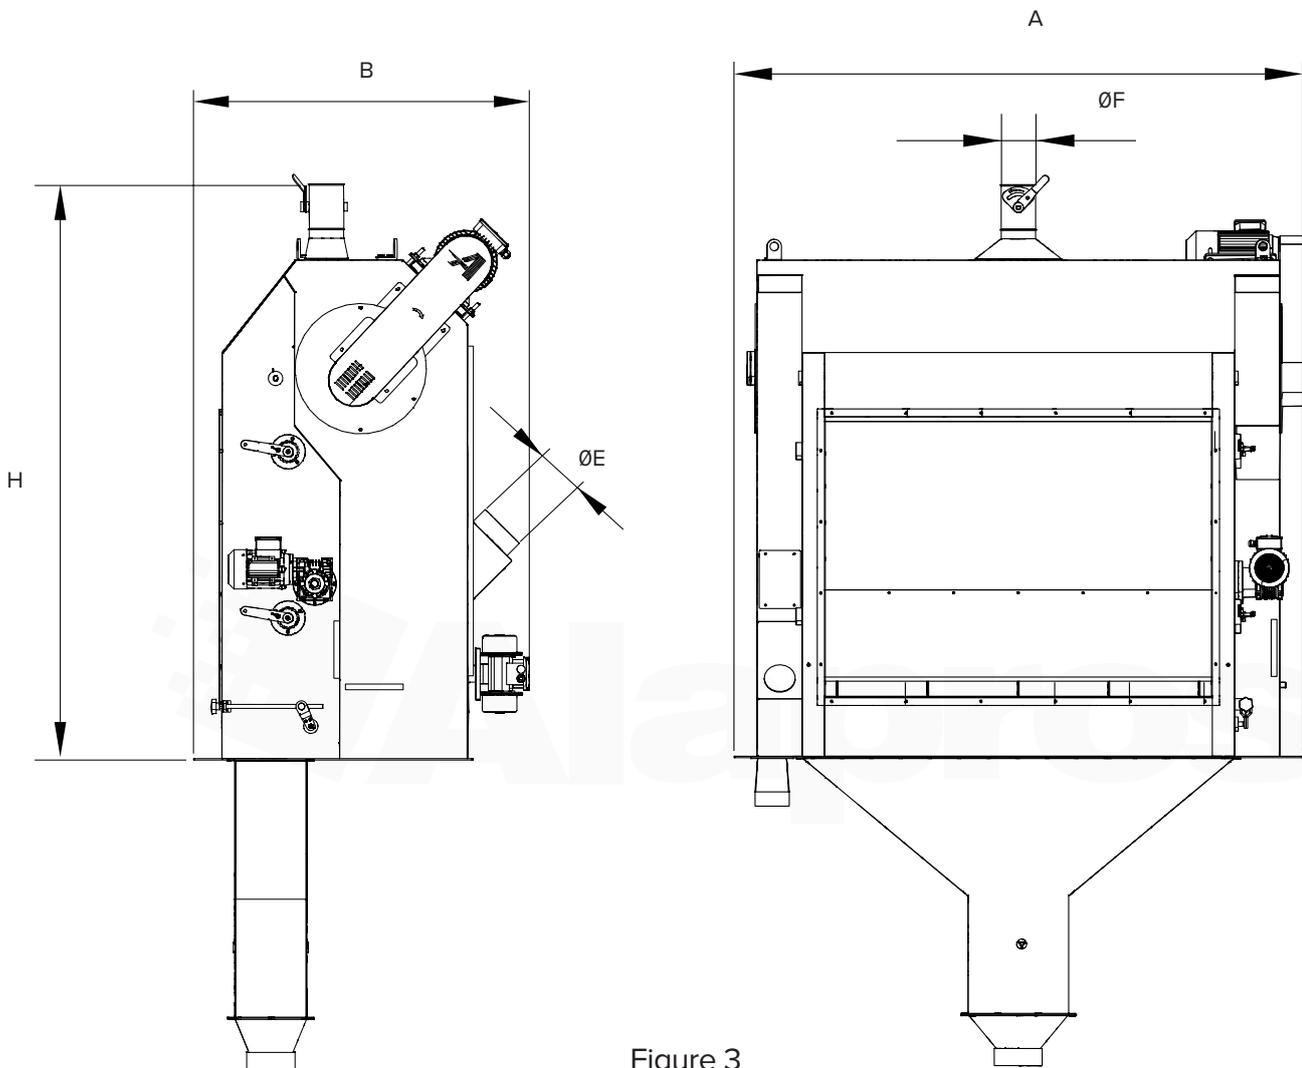


Figure 3

MODEL	DIMENSIONS mm.							WEIGHT kg.
	A	B	H	C	D	ØE	ØF	
ARA 600	1145	1180	1945	1085	950	120	120	550
ARA 1000	1545	1180	1945	1485	950	120	120	670
ARA 1500	2045	1180	1945	1985	950	150	120	820

1.12 PARTS OF THE MACHINE

The machine consists of the following operational parts;

1.12.1 INLET UNIT OF THE PRODUCT

Product enters into the Air Recycling Aspirator from the Horizontal Air Recycling Aspirator or from the Grain Separator at the rear surface. Both of the outlets of the machine don't contact physically with the product inlet of the Air Recycling Aspirator.

Product is poured into inclined sieve tray.

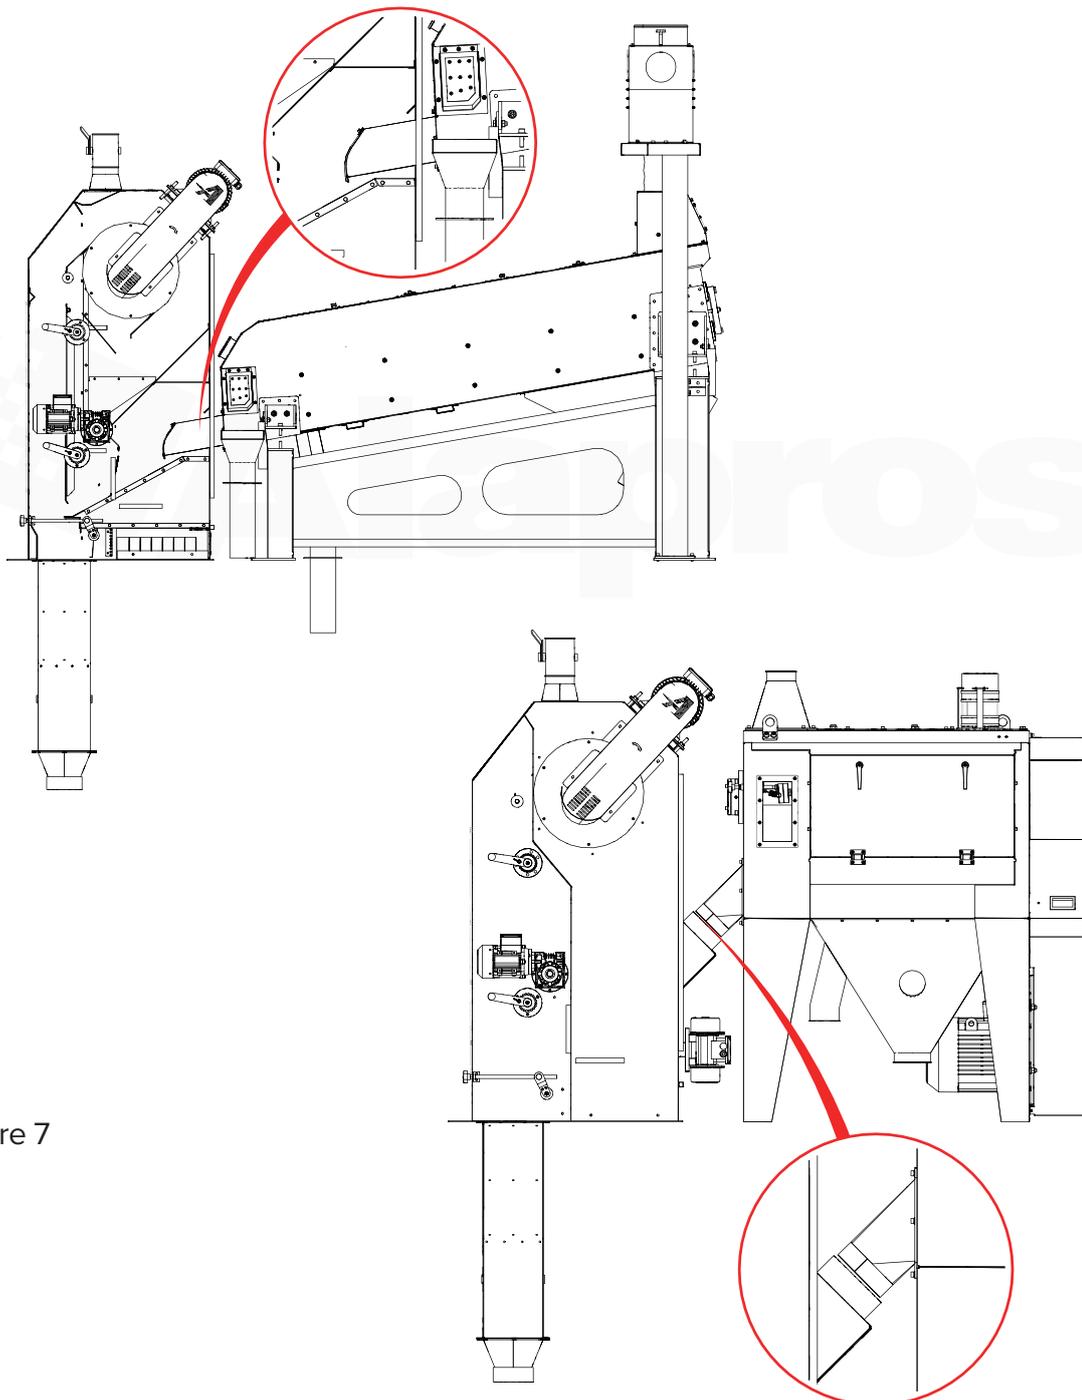


Figure 7

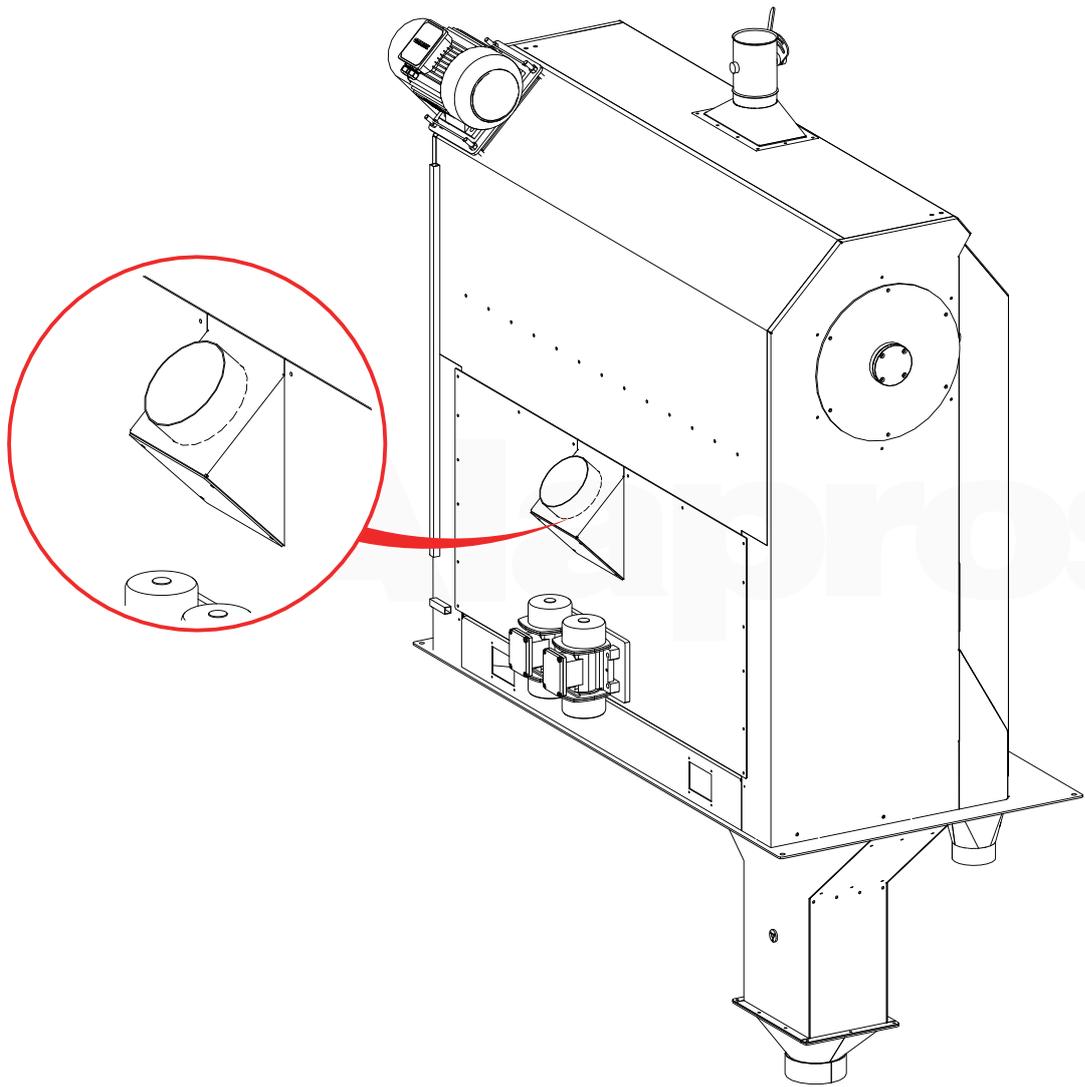


Figure 8